




MODCHIP INSTALLATION SERVICE

MOD-AREA.com

## Installation example NME-360 from Team Underdog for Hitachi DVD-ROM


1.- Remove the 6 screws on the bottom of the drive

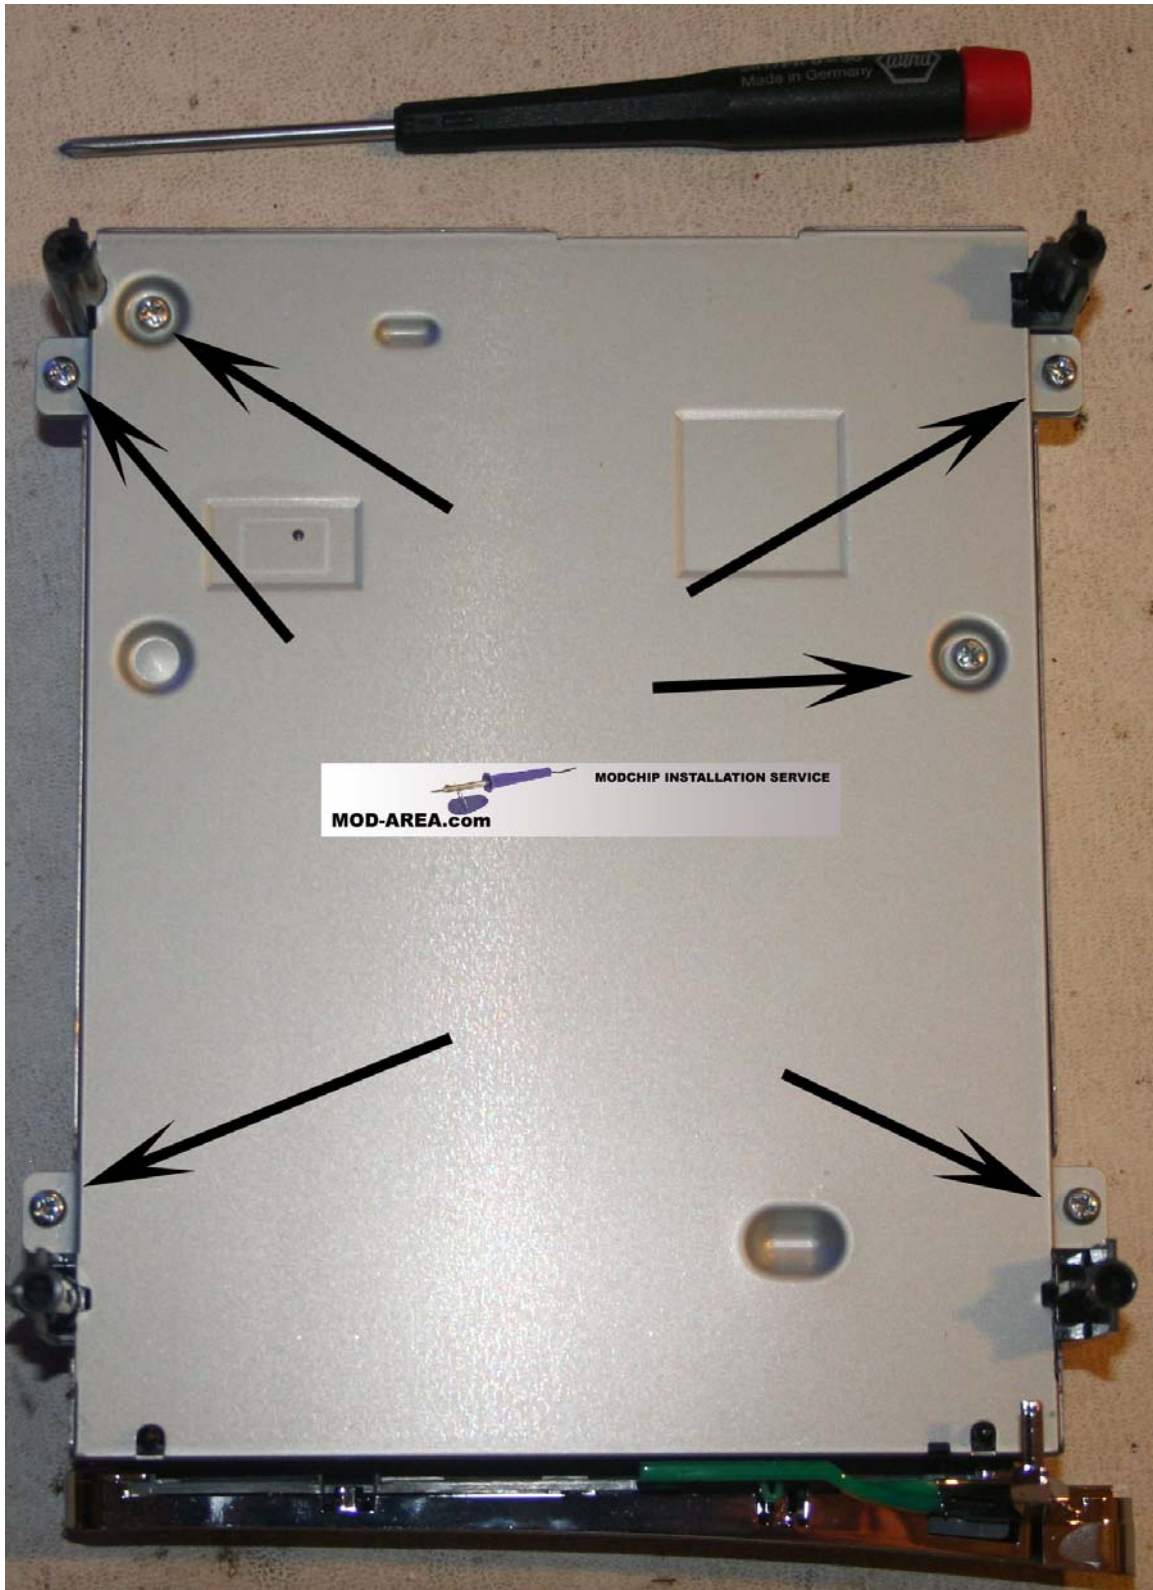


2.- Remove top and bottom cover



3.- Disconnect the 4 flat cable

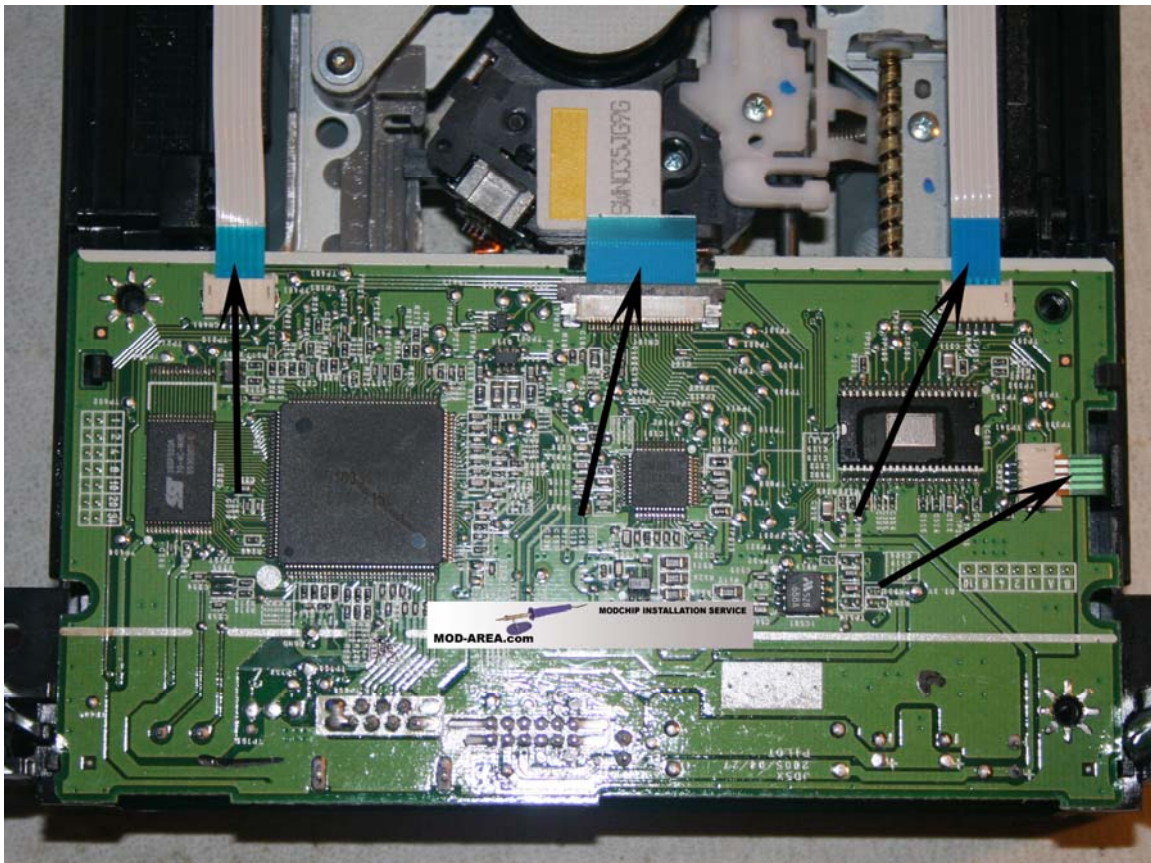


4.- Press the holder and lift the board to remove the PCB

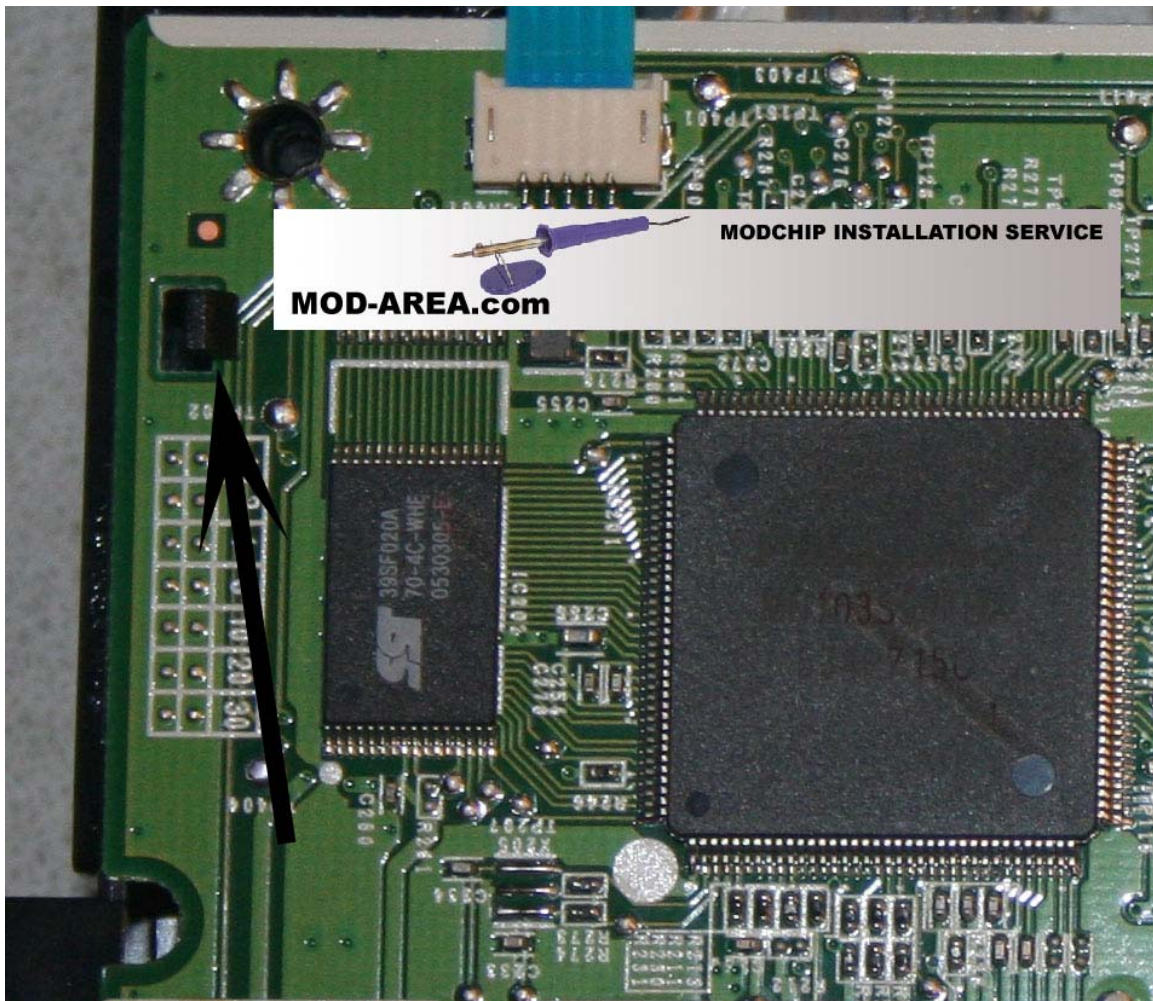


5.-Follow the installation instructions for NME-360 Samsung Drive


Top view of the installation

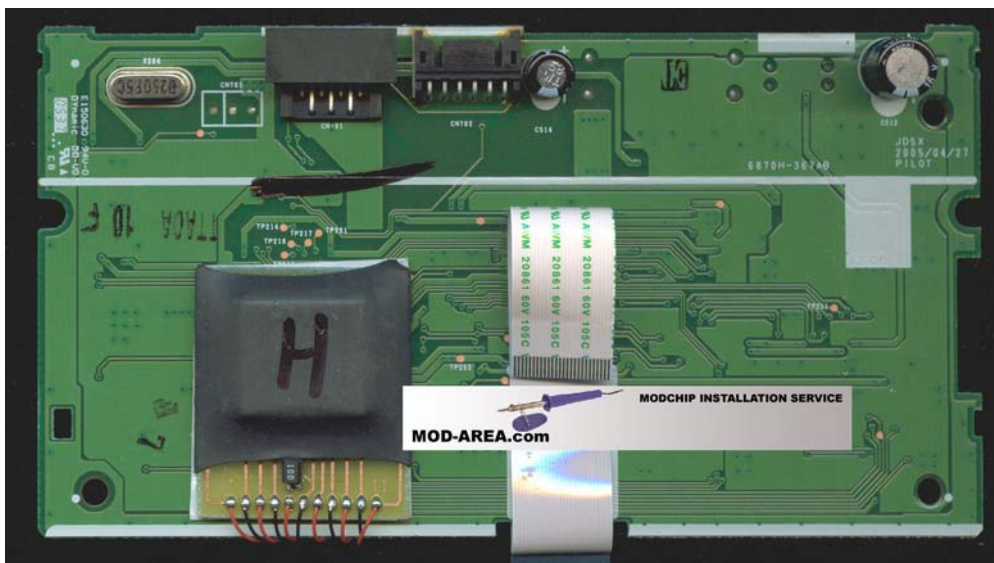

Bottom view of the installation

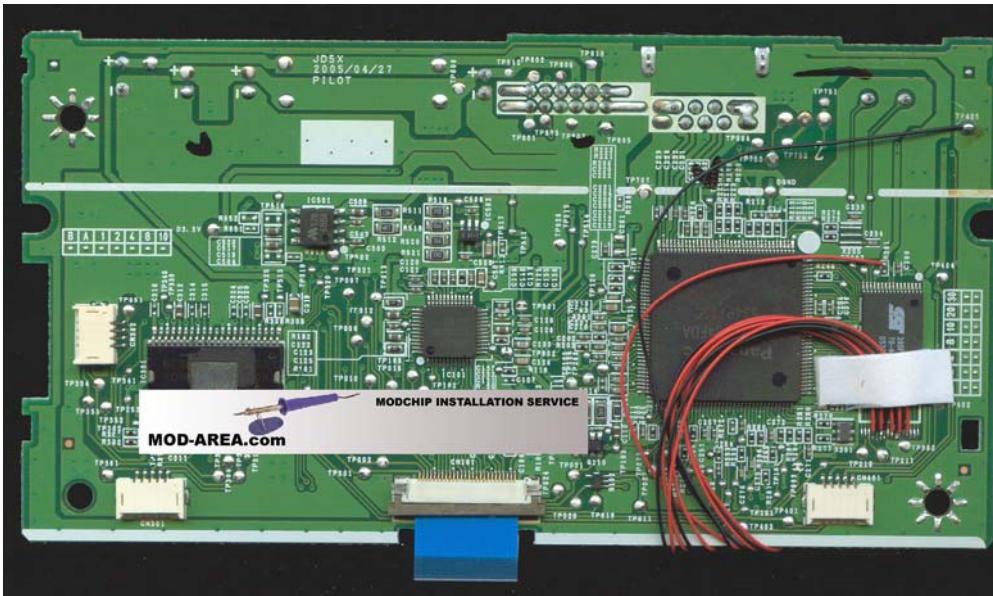

DVD Drive assembled top view

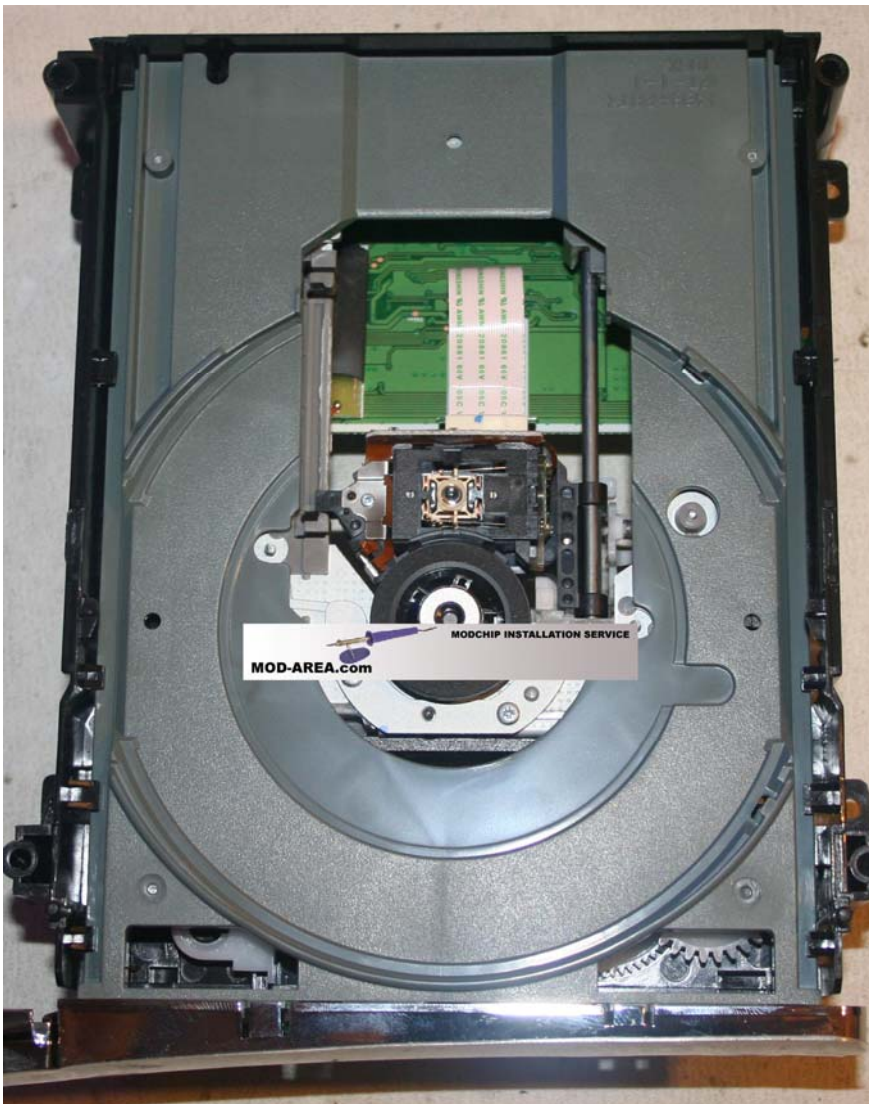



Contact me at [info@mod-area.com](mailto:info@mod-area.com)